




User Guide

For use with Van Mark Brakes and Trim-A-Table™. No Tools Required for setup. Please read all instructions carefully.

Mark I Series™ and Mark II TrimMaster® Brake Installation

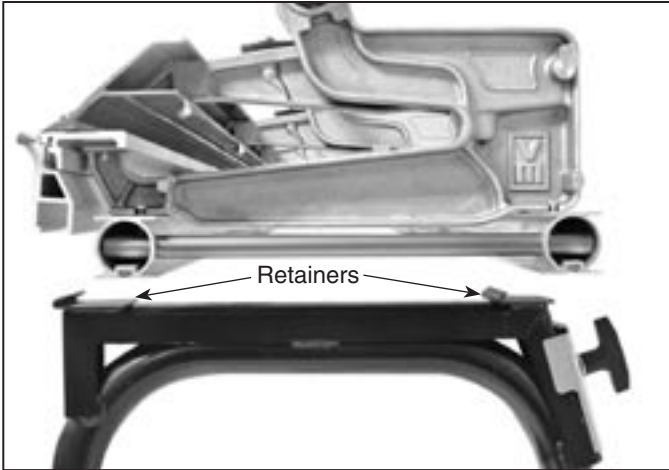

Step 1. As shown, position UniLeg™ under brake with retainers slightly forward of the base rail lips. Lower brake onto flat surface of the retainers and slide forward into retainer channels.

Step 2. Extend latch plate over rear base rail lip and tighten securely with T knob. During use, periodically check tightness of T knobs. Repeat these steps with opposite UniLeg™.

Trim-A-Brake™ Installation



Lower Trim-A-Brake™ onto flat top surface of UniLeg™ making sure to insert front base rail lip into retainer channel as in Step 1 above. Place latch plate lip over rear base rail lip as shown (rear of the latch plate should be seated into grooves in rear retainer). Tighten T knob and repeat on opposite end of brake.

Lower Trim-A-Table™ onto flat top surface of UniLeg™ making sure to insert front base rail lip into retainer channel as in Step 1 above. Place latch plate lip over rear base rail lip as shown. Tighten the T knob and repeat on opposite end of tool.

Note: As shown on right, once you have installed both UniLegs™, position each one 1/4 to 1/3 (of the tool length) in from each end of tool.

Example Leg Position



Van Mark
"Products Engineered to Bring Out the Best in Your Work"

24145 Industrial Park Dr., Farmington Hills, MI 48335

Toll Free No. 1-800-Van Mark

Toll Free Fax 1-888-Van Mark

Phone No. 1-248-478-1200

Area Fax No. 1-248-478-1226

Web Site: www.van-mark.com E-Mail: sales@van-mark.com